

SECTION : 9G

INTERIOR TRIM

CAUTION : *Disconnect the negative battery cable before removing or installing any electrical unit or when a tool or equipment could easily come in contact with exposed electrical terminals. Disconnecting this cable will help prevent personal injury and damage to the vehicle. The ignition must also be in LOCK unless otherwise noted.*

TABLE OF CONTENTS

SPECIFICATIONS	9G-2	FRONT ROCKER TRIM PANEL	9G-11
FASTENER TIGHTENING		REAR ROCKER TRIM PANEL	9G-12
SPECIFICATIONS	9G-2	FLOOR CONSOLE	9G-13
SPECIAL TOOLS	9G-2	CUPHOLDER	9G-15
SPECIAL TOOLS TABLE	9G-2	FLOOR CARPET	9G-16
MAINTENANCE AND REPAIR	9G-3	LUGGAGE COMPARTMENT WHEELHOUSE	
ON-VEHICLE SERVICE	9G-3	TRIM PANEL	9G-18
FRONT DOOR TRIM PANEL	9G-3	LUGGAGE COMPARTMENT REAR TRIM	
REAR DOOR TRIM PANEL	9G-4	PANEL	9G-19
A-PILLAR TRIM PANEL	9G-6	DRIVER'S SIDE KNEE BOLSTER	9G-19
UPPER B-PILLAR TRIM PANEL	9G-7	GENERAL DESCRIPTION AND SYSTEM	
LOWER B-PILLAR TRIM PANEL	9G-8	OPERATION	9G-21
C-PILLAR TRIM PANEL	9G-9	INTERIOR TRIM PANELS	9G-21
DECK LID SILL PLATE COVER	9G-10	PRESSURE RELIEF VENT	9G-21
KICK PANEL	9G-11	FLOOR CONSOLE	9G-21
		FLOOR CARPET	9G-21


SPECIFICATIONS

FASTENER TIGHTENING SPECIFICATIONS

Application	N•m	Lb–Ft	Lb–In
Console-to-Parking Brake Assembly Screw	4	–	35
Cupholder Screw	2.5	–	22
Door Trim Panel Screws	2.5	–	22
Driver's Side Knee Bolster Mounting Bolts	10	–	89
Floor Console Screws	2.5	–	22
Gearshift Housing Bolts	7	–	62
Hood Latch Release Handle Mounting Screw	3	–	27
Seat Belt Anchor Bolt	37	27	–

SPECIAL TOOLS

SPECIAL TOOLS TABLE

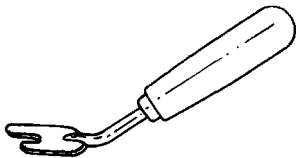 <p>A109G029</p>	<p>KM-475-B Trim Remover</p>
--	----------------------------------

MAINTENANCE AND REPAIR

ON-VEHICLE SERVICE




FRONT DOOR TRIM PANEL




Tools Required

KM-475-B Trim Remover

Removal Procedure

1. Lower the front window.
2. Pry off the inside door handle trim bezel.
3. Remove the door trim panel screws.
4. Remove the power window/mirror control switch.
5. Disconnect the power window/mirror control switch electrical connectors.
6. Pry off the trim panel using the trim remover KM-475-B.
7. Remove the door step lamp.

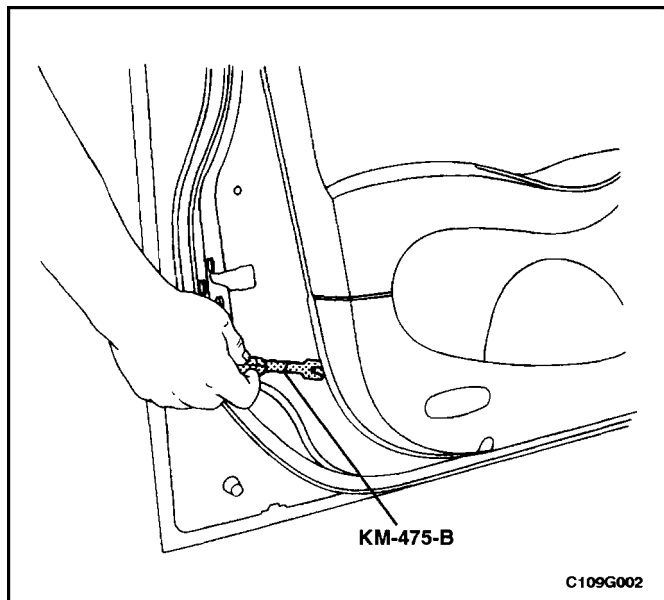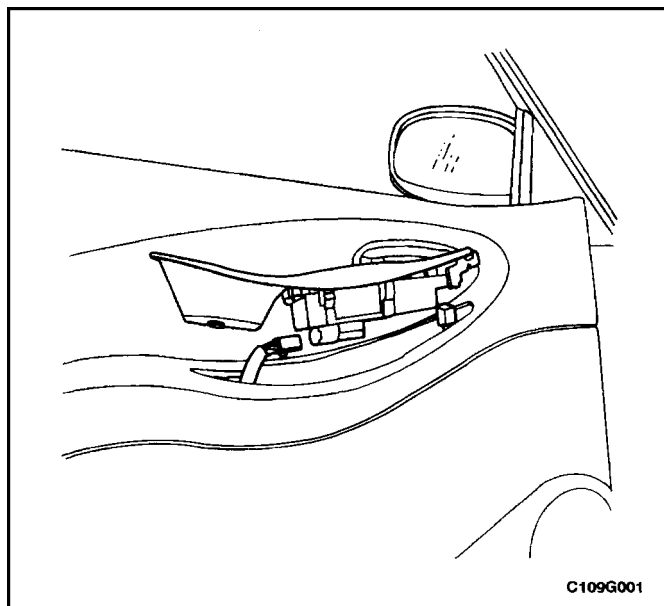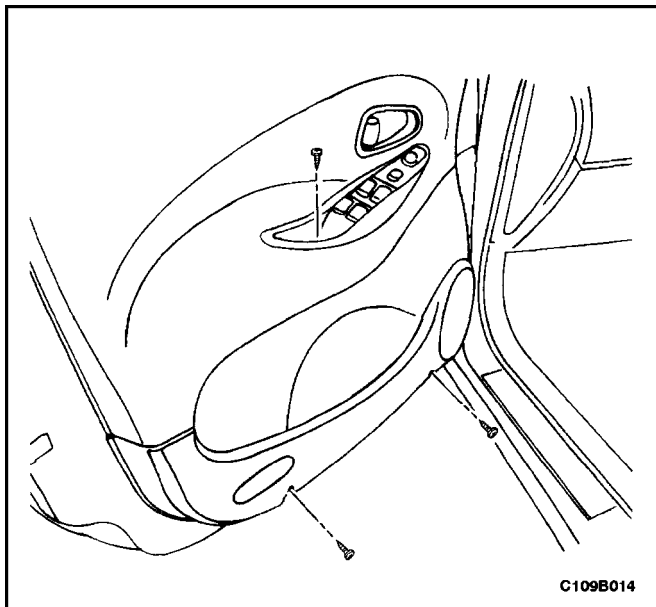

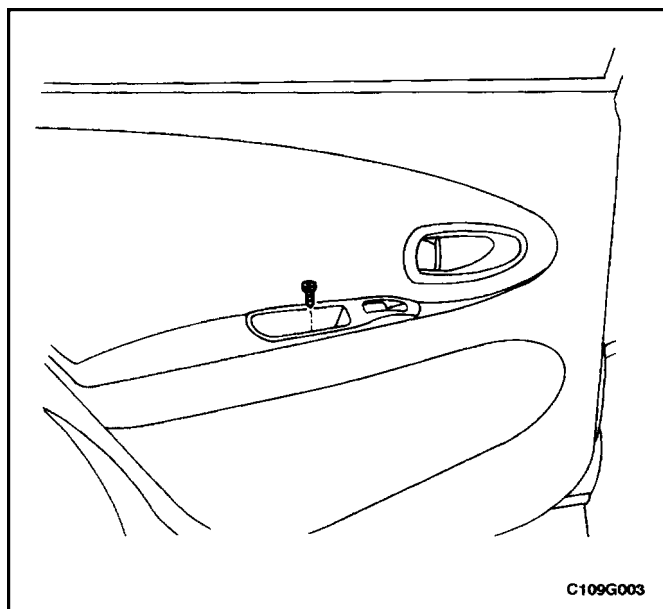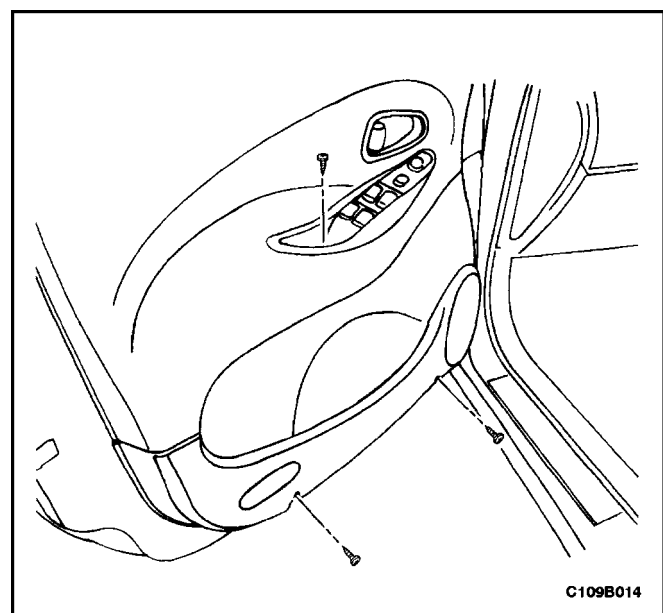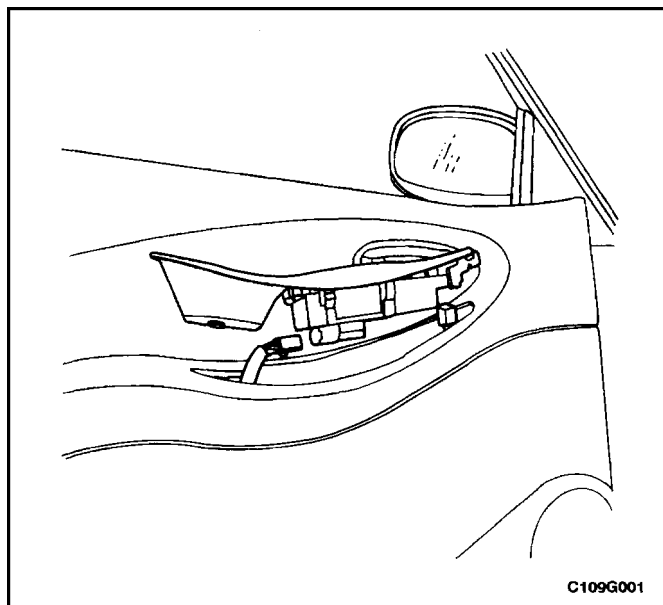

Installation Procedure

1. Install the door step lamp.
2. Install the trim panel.
3. Connect the power window/mirror control electrical connectors.
4. Install the power window/mirror control switch.

5. Install the door trim panel screws.

Tighten

Tighten the door trim panel screws to 2.5 N•m (22 lb-in).

6. Install the inside door handle trim bezel.
7. Raise the front window.

REAR DOOR TRIM PANEL


(Power Rear Window Regulator Shown, Manual Rear Window Regulator Similar)

Tools Required


KM-475-B Trim Remover

Removal Procedure


1. Lower the rear window.
2. Remove the manual rear window regulator, if equipped. Refer to *Section 9P, Doors*.
3. Pry off the inside door handle trim bezel.
4. Remove the door trim panel screw (power rear window regulator shown, manual rear window regulator similar).

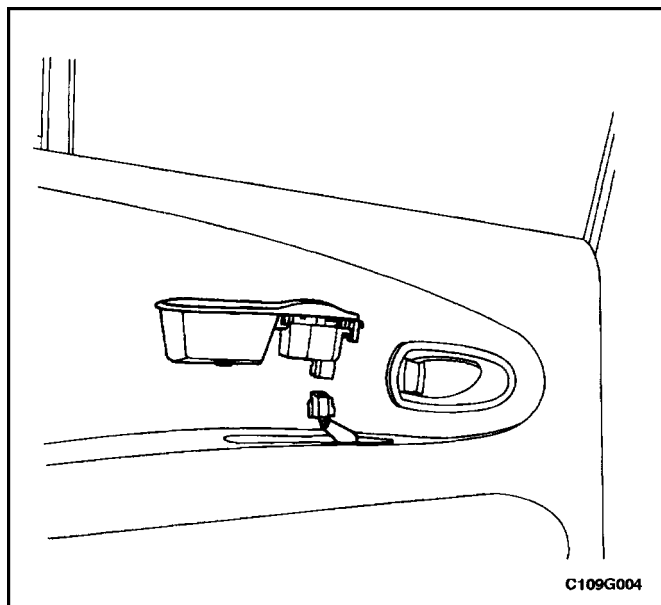

5. Remove the power window control switch, if equipped.
6. Disconnect the power window control switch electrical connector.

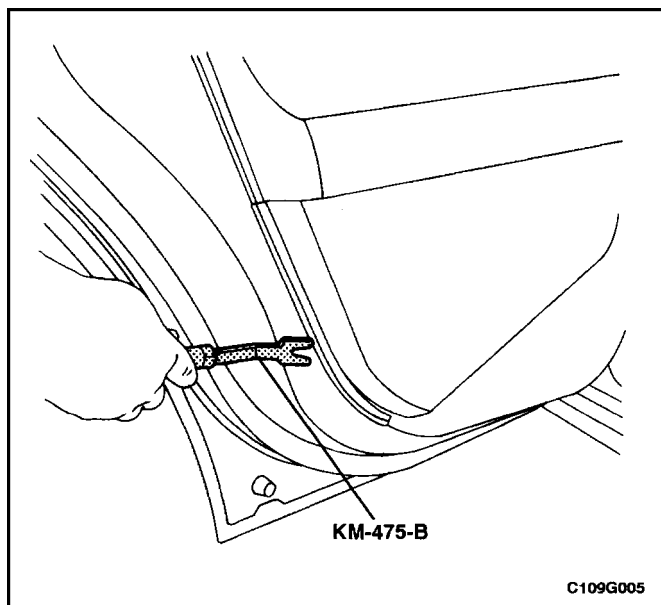


7. Pry off the trim panel using the trim remover KM-475-B.

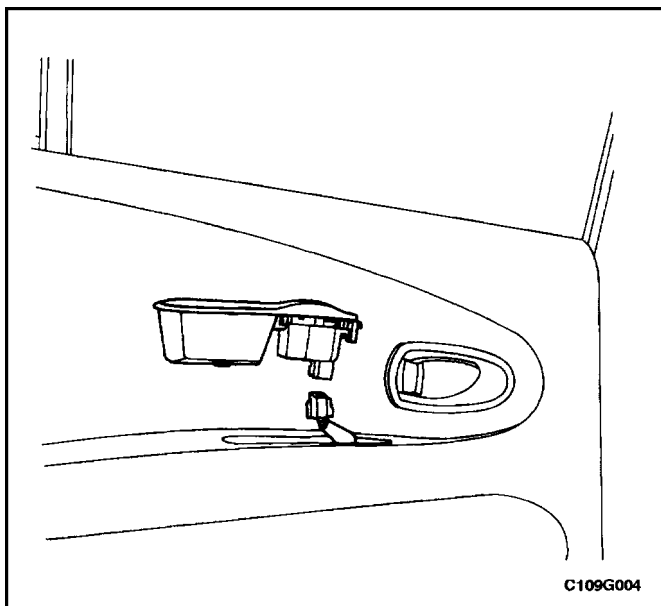

Installation Procedure

1. Install the trim panel.
2. Connect the power window control switch electrical connector, if equipped.
3. Install the power window control switch..

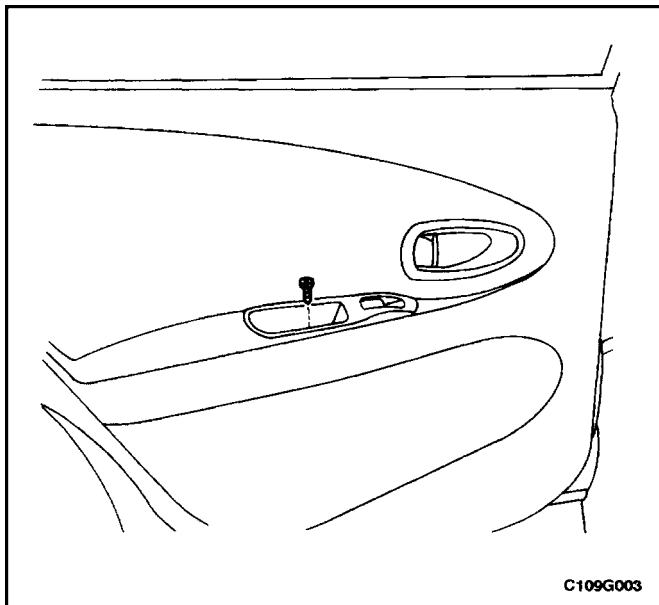


4. Install the door trim panel screw.

Tighten

Tighten the door trimpanel screw to 2.5 N•m (22 lb-in).


5. Install the inside door handle trim bezel.
6. Install the manual rear window regulator, if equipped. Refer to *Section 9P, Doors*.
7. Raise the rear window.

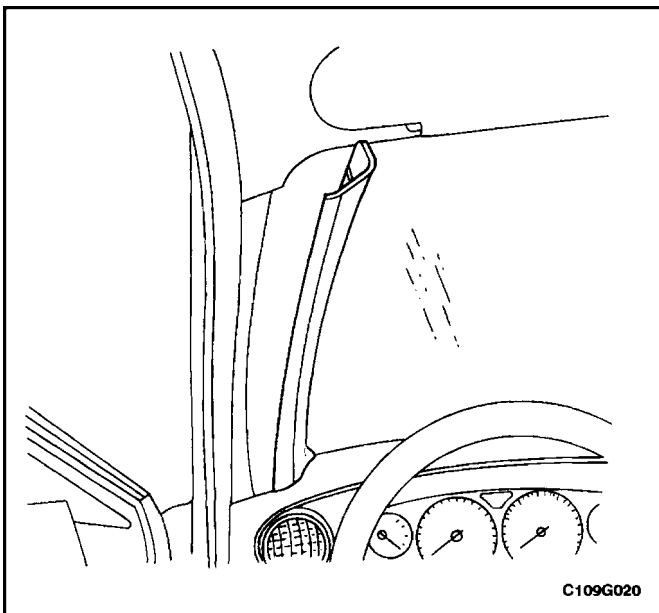

A-PILLAR TRIM PANEL


Removal Procedure

1. Remove the A-pillar trim panel.

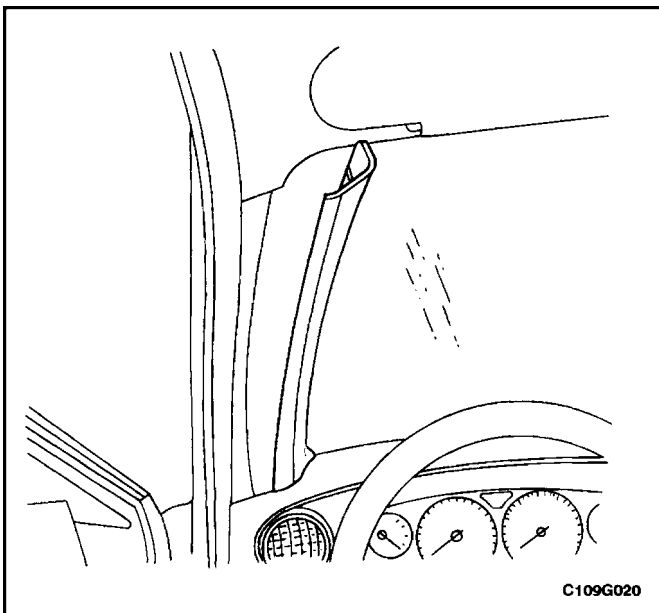

Installation Procedure



1. Install the A-pillar trim panel.

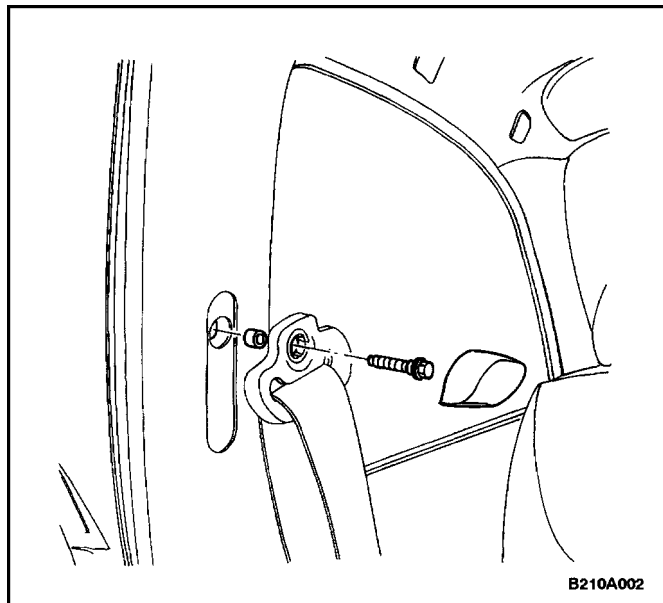

UPPER B-PILLAR TRIM PANEL


Removal Procedure

1. Remove the bolt and the upper front seat belt anchor.
2. Reposition the upper portion of the lower B-pillar trim panel.
3. Pry off the upper B-pillar trim panel.

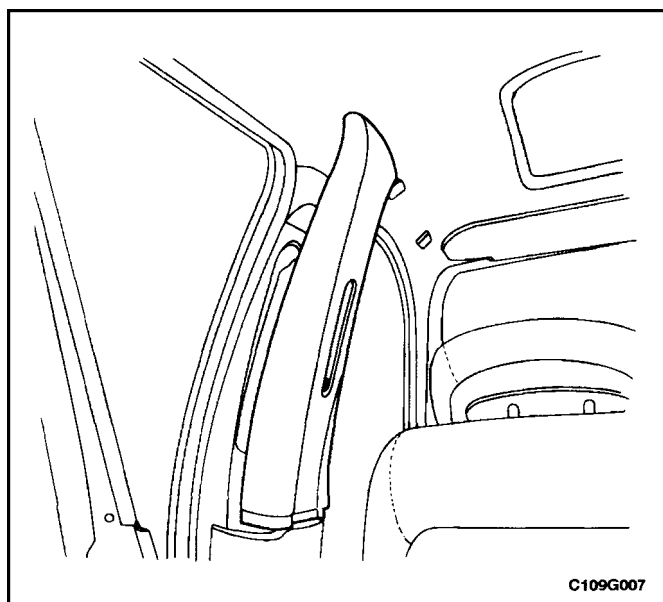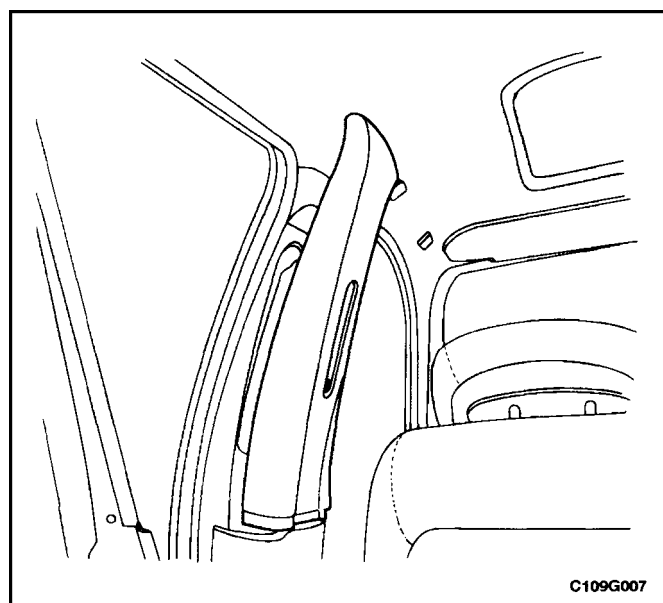

Installation Procedure

1. Install the upper B-pillar trim panel.

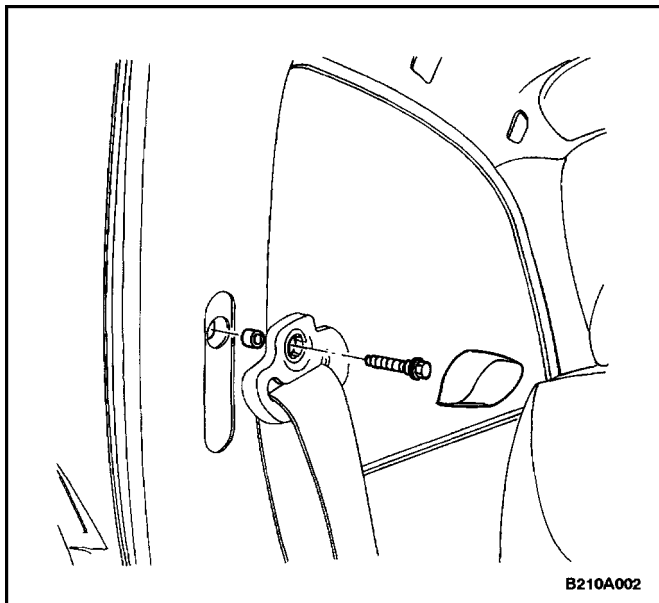

2. Install the upper portion of the lower B-pillar trim panel to its original position.
3. Install the upper front seat belt anchor with the bolt.


Tighten

Tighten the seat belt anchor bolt to 37 N•m (27 lb–ft).

LOWER B-PILLAR TRIM PANEL


Removal Procedure


1. Reposition the rear portion of the front rocker trim panel and the front portion of the rear rocker trim panel.
2. Remove the lower B-pillar trim panel.

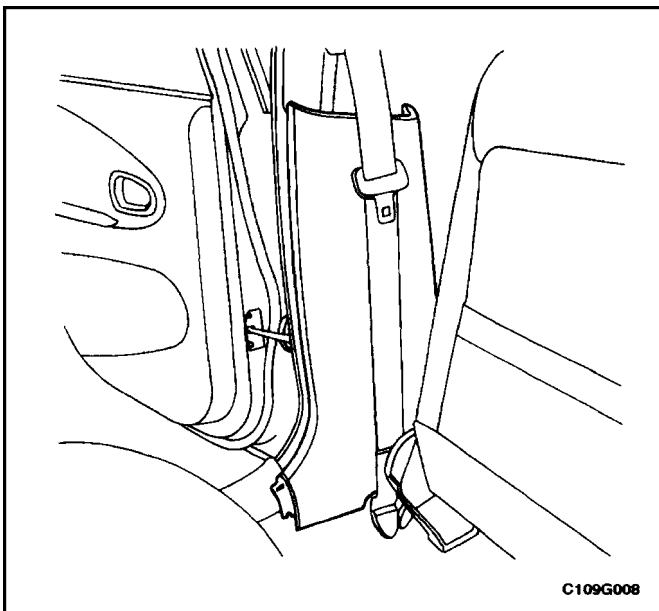

Installation Procedure

1. Install the lower B-pillar trim panel.
2. Install the front rocker trim panel and the rear rocker trim panel to their original positions.


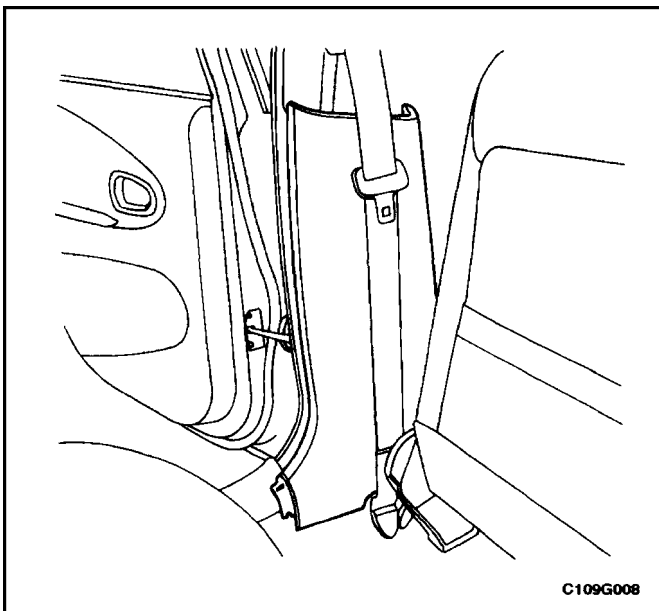


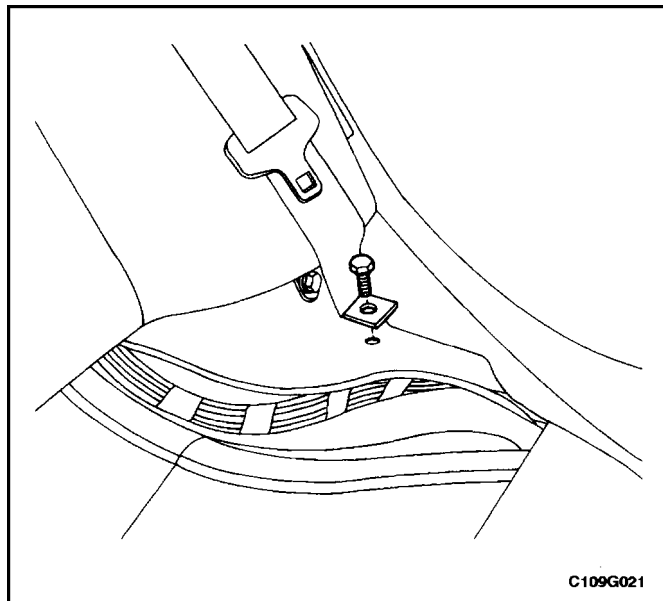

C-PILLAR TRIM PANEL


Removal Procedure

1. Remove the bolt and the rear seat belt floor anchor.
2. Remove the rear seat side bolster cushion. Refer to *Section 9H, Seats*.
3. Pry off the C-pillar trim panel from the body.
4. Remove the seat belt trim piece.
5. Remove the C-pillar trim panel from the seat belt.

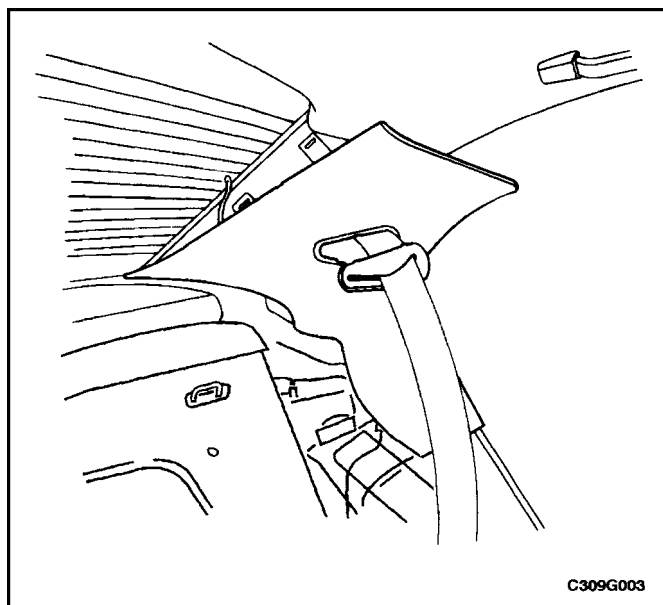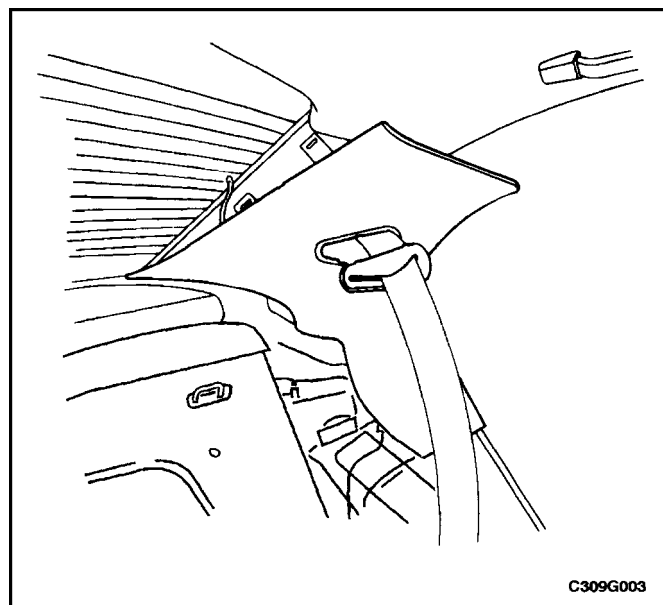

Installation Procedure


1. Feed the seat belt through the C-pillar trim panel.
2. Install the seat belt trim piece.
3. Install the C-pillar trim panel.

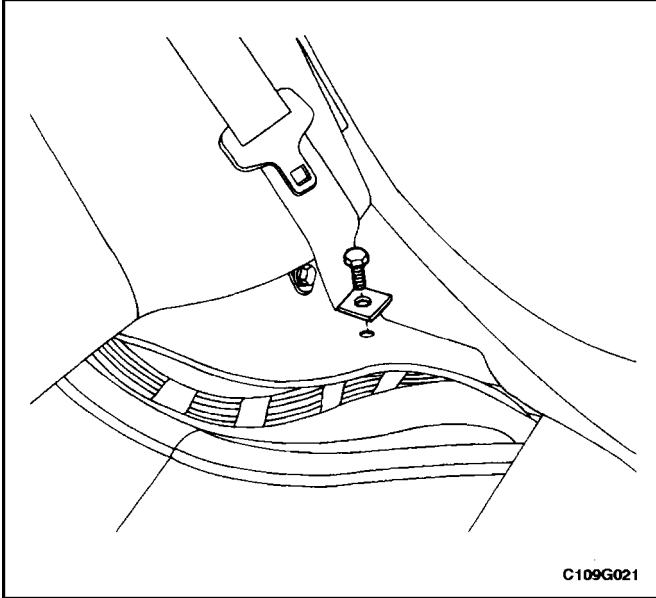

4. Install the rear seat side bolster cushion. Refer to *Section 9H, Seats*.
5. Install the rear seat belt floor anchor with the bolt.

Tighten

Tighten the seat belt anchor bolt to 37 N•m (27 lb–ft).

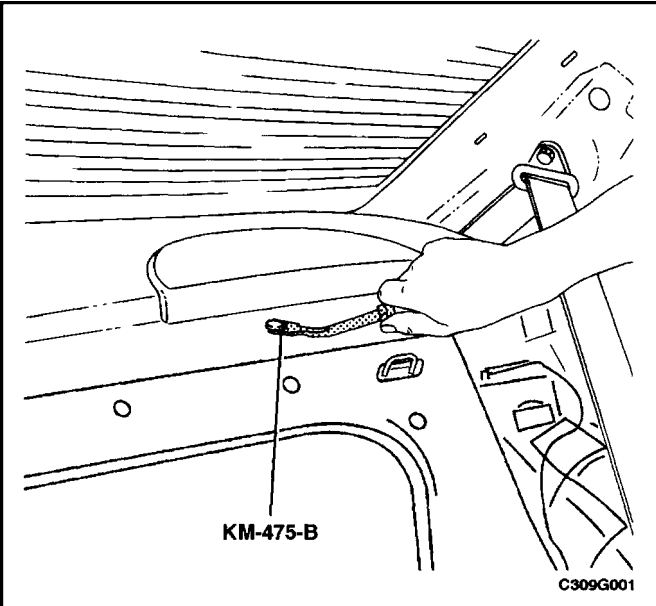


DECK LID SILL PLATE COVER

Tools Required

KM-475-B Trim Remover


Removal Procedure

1. Remove the rear seat side bolster cushion. Refer to *Section 9H, Seats*.
2. Lower the rear seatback.
3. Remove the left side C-pillar trim panel.
4. Remove the plastic retaining clips and the rear deck lid sill plate cover using the trim remover KM-475-B.

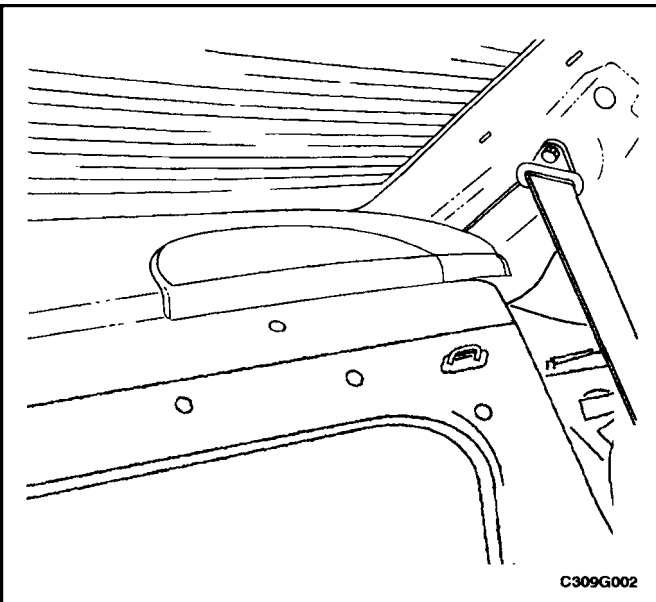

Installation Procedure


1. Install the rear deck lid sill plate cover with the plastic retaining clips.
2. Install the left side C-pillar trim panel.
3. Install the rear seat side bolster cushion. Refer to *Section 9H, Seats*.

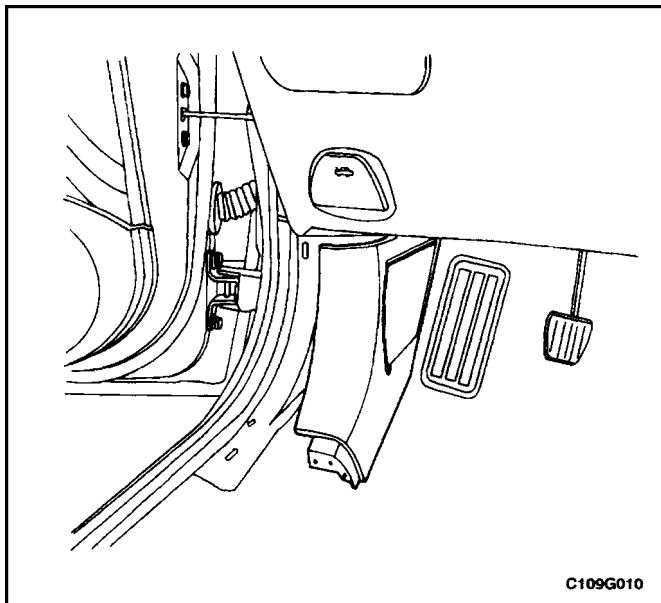

KICK PANEL


Removal Procedure

1. Remove the front rocker trim panel.
2. Remove the kick panel.

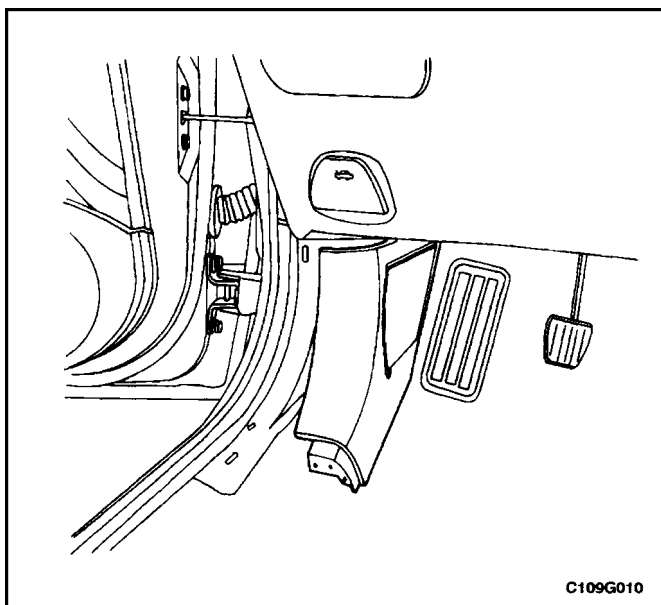

Installation Procedure


1. Install the kick panel.
2. Install the front rocker trim panel.

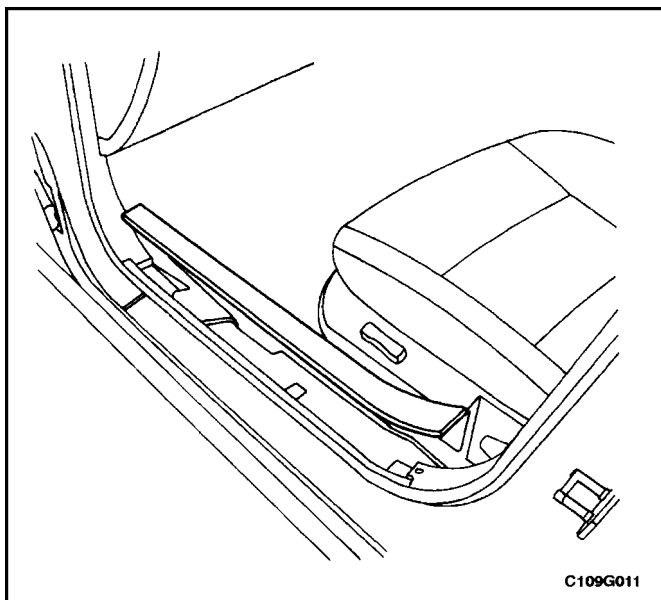

FRONT ROCKER TRIM PANEL


Removal Procedure

1. Remove the front rocker trim panel.

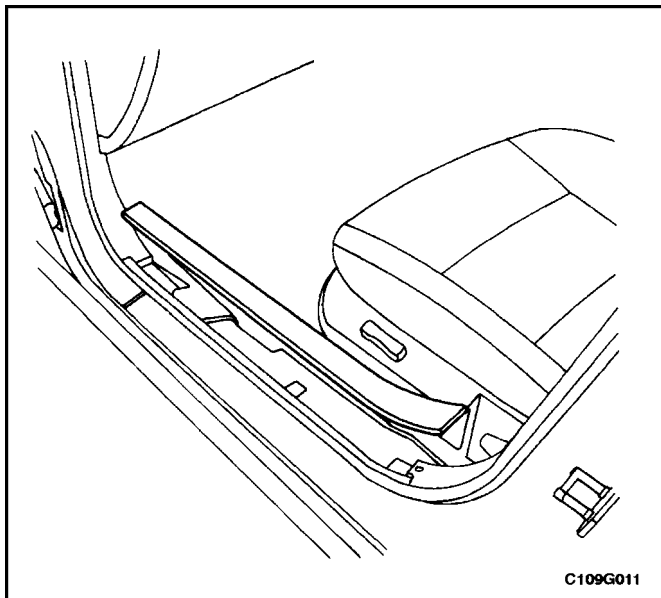

Installation Procedure


1. Install the front rocker trim panel.

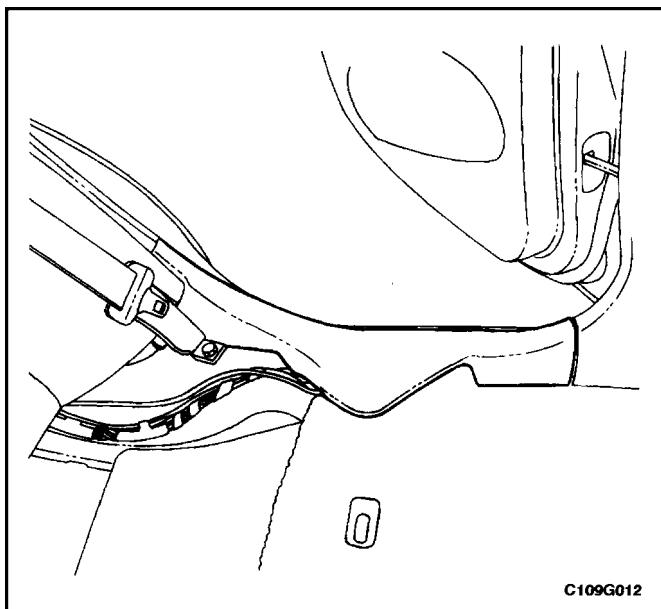

REAR ROCKER TRIM PANEL


Removal Procedure

1. Reposition the rear seat cushion.
2. Remove the rear rocker trim panel.

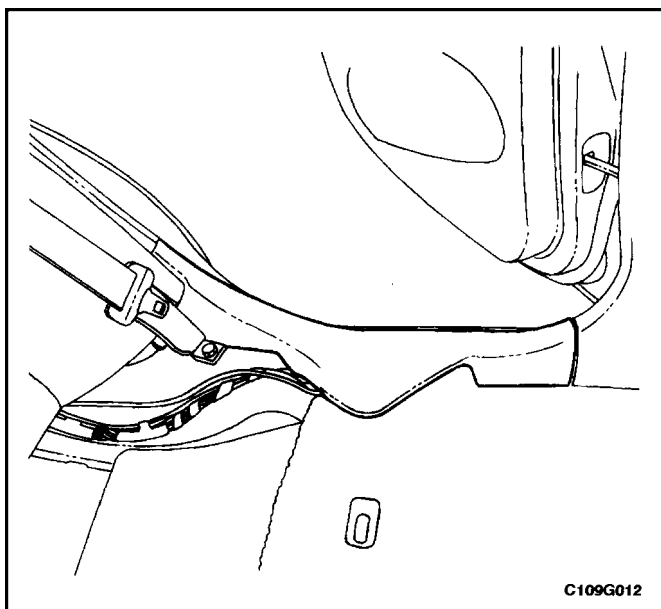

Installation Procedure


1. Install the rear rocker trim panel.
2. Install the rear seat cushion to its original position.

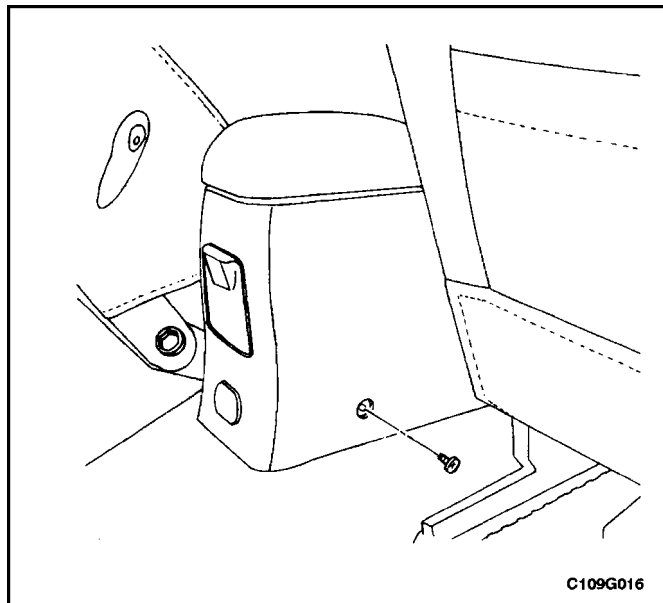


FLOOR CONSOLE

Removal Procedure


1. Disconnect the negative battery cable.
2. Remove the screws from the rear portion of the floor console.

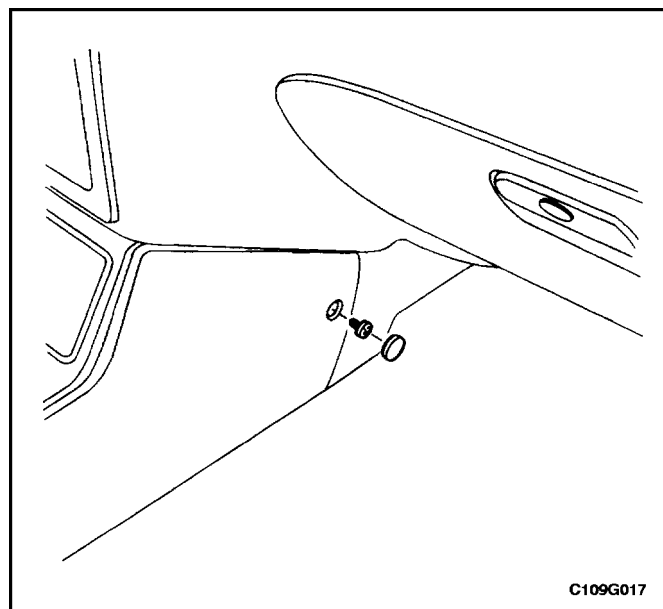


3. Remove the cupholder. Refer to "Cupholder" in this section.
4. Remove the screws from the front portion of the floor console.

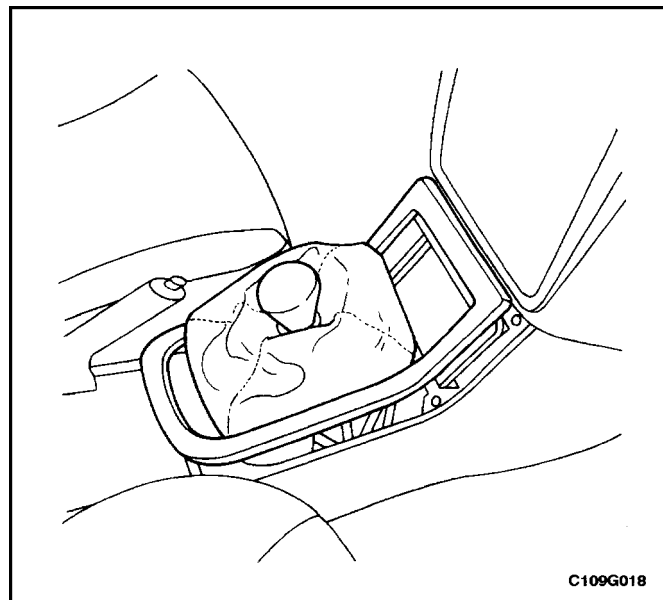

5. Remove the shift lever boot, (if equipped).
6. Remove the shift lever trim panel.

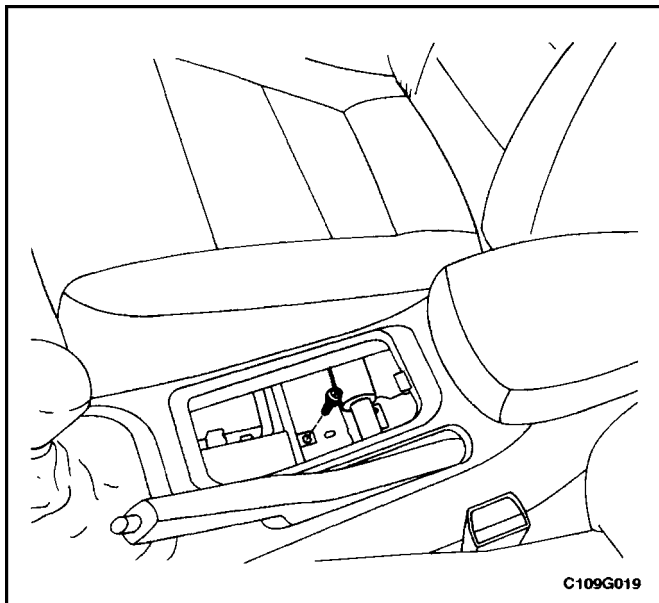

7. Remove the console-to-parking brake assembly screw.
8. Remove the floor console.
9. Disconnect the ashtray and the cigar lighter electrical connector.

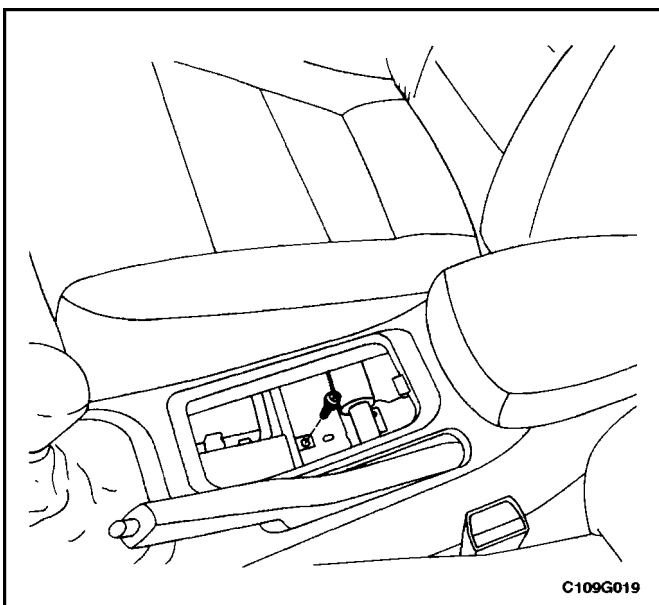


Installation Procedure


1. Connect the ashtray and the cigar lighter electrical connector.
2. Install the floor console.
3. Install the console-to-parking brake assembly screw.

Tighten

Tighten the console-to-parking brake assembly screw to 4 N•m (35 lb-in).

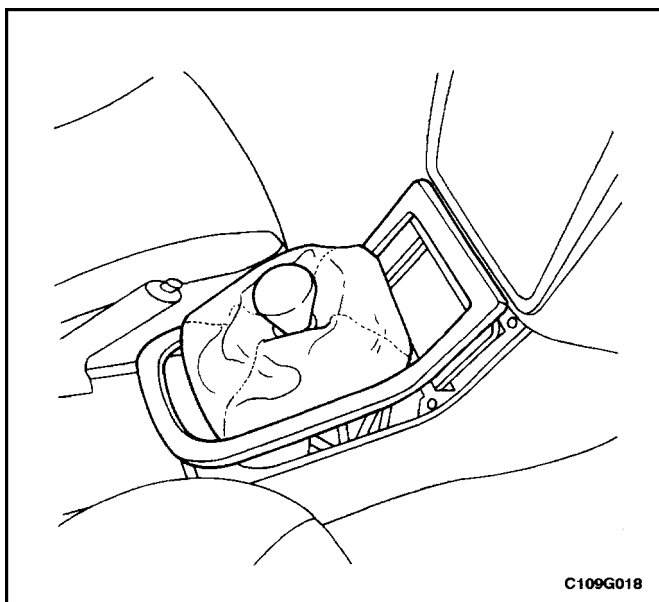


4. Install the shift lever trim panel.
5. Install the shift lever boot, (if equipped).

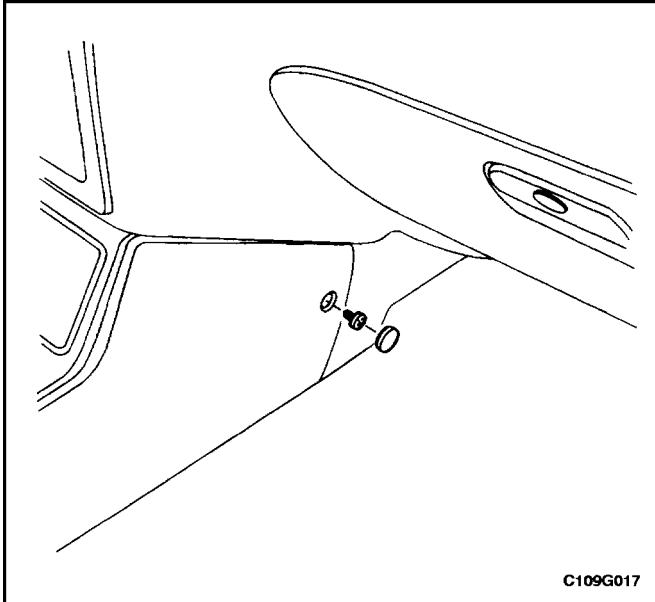

6. Install the screws into the front portion of the floor console.

Tighten

Tighten the floor console screws to 2.5 N•m(22 lb-in).

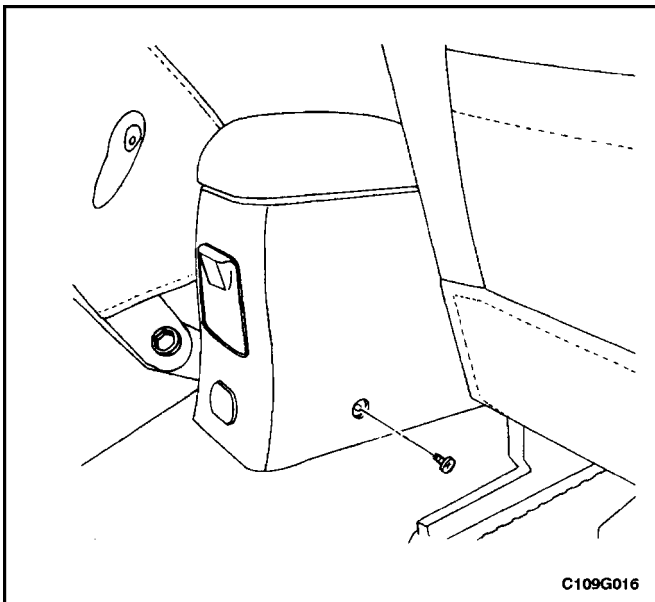


7. Install the cupholder. Refer to "Cupholder" in this section.
8. Install the rear portion of the floor console with the screws.

Tighten

Tighten the floor console screws to 2.5 N•m(22 lb-in).


9. Connect the negative battery cable.

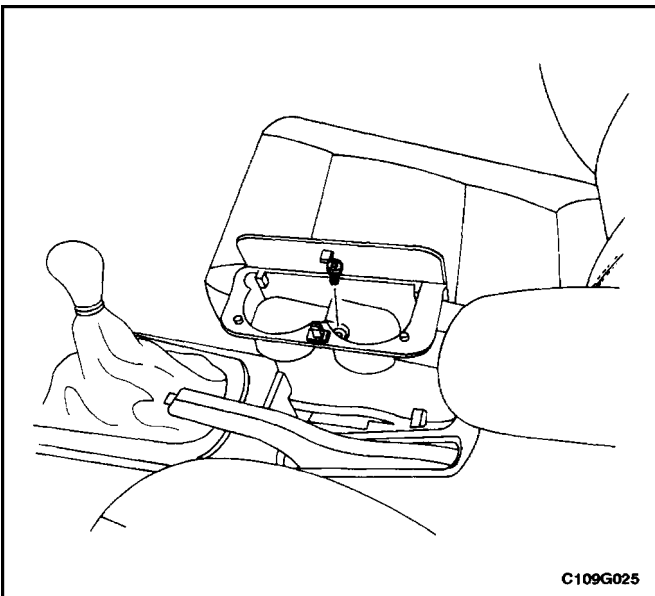

CUPHOLDER

Removal Procedure


1. Remove the screw and the cupholder.

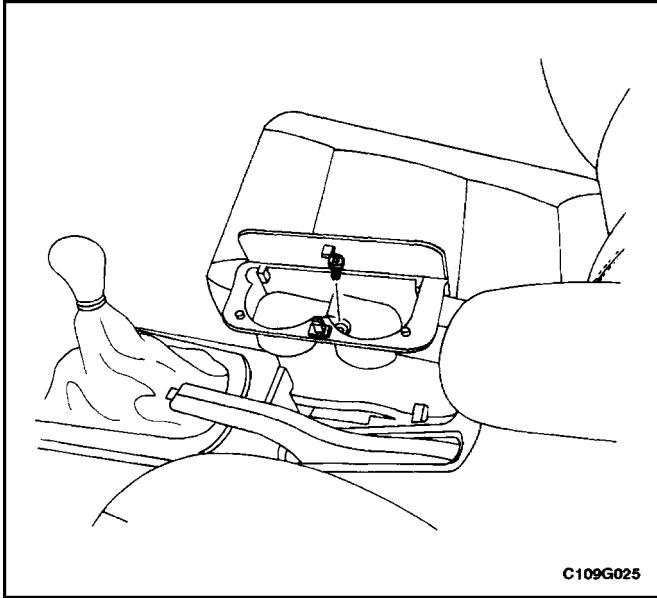

2. Install the cupholder with the screw.

Tighten


Tighten the cupholder screw to 2.5 N•m (22 lb-in).

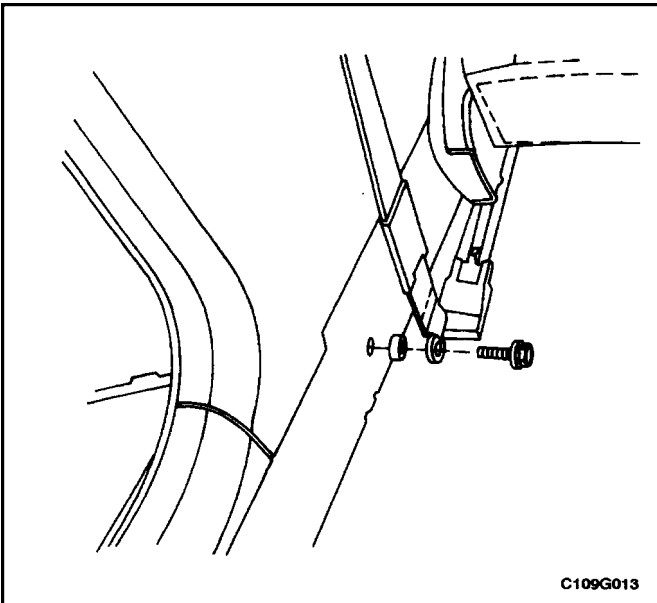


FLOOR CARPET


Removal Procedure

1. Disconnect the negative battery cable.
2. Remove the rear seat cushion. Refer to *Section 9H, Seats*.
3. Remove the left and the right rear rocker trim panels. Refer to "Rear Rocker Trim Panel" in this section.
4. Remove the bolts and the left and the right lower front seat belt anchors from the B-pillar.
5. Remove the left and the right front rocker trim panels.
6. Remove the left and the right lower B-pillar trim panels. Refer to "Lower B-Pillar Trim Panel" in this section.
7. Remove the front seats. Refer to *Section 9H, Seats*.
8. Remove the left and the right kick panels. Refer to "Kick Panel" in this section.
9. Remove the floor console. Refer to "Floor Console" in this section.
10. Remove the gearshift housing bolts and reposition the gearshift housing.

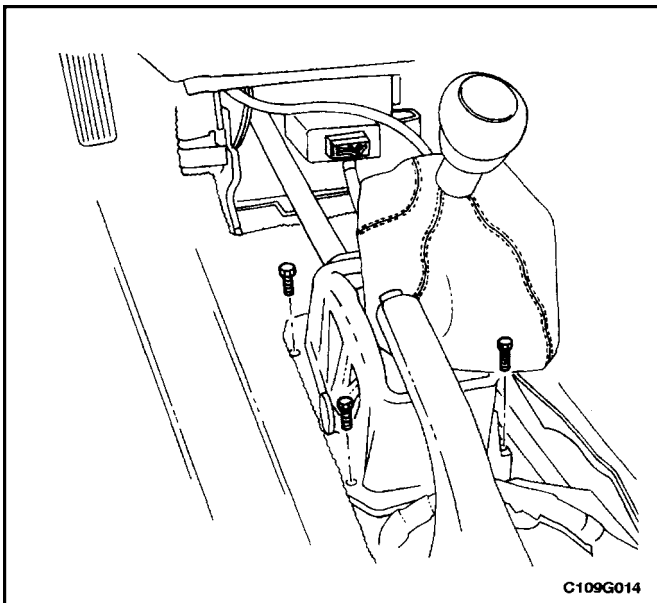

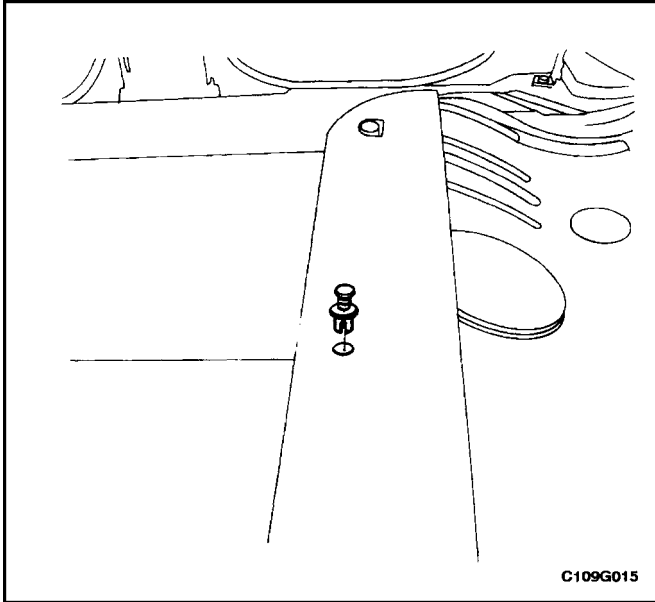


11. Remove the floor carpet retaining clips.
12. Remove the floor carpet.

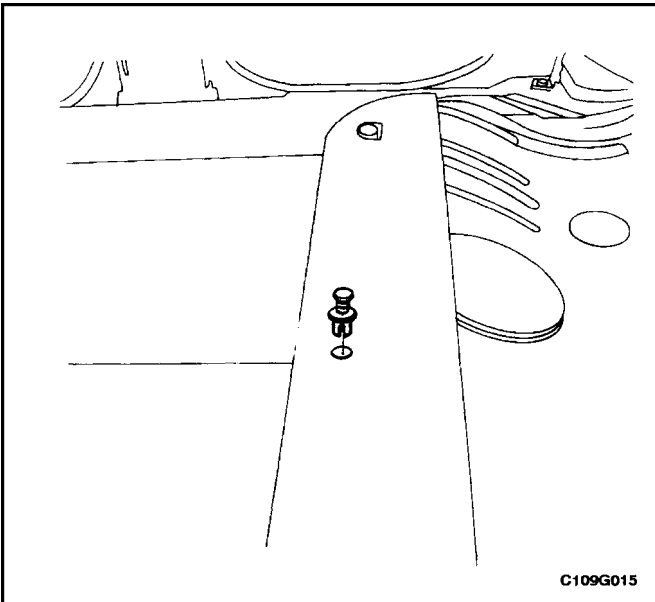

Installation Procedure


1. Install the floor carpet.
2. Install the floor carpet retaining clips.

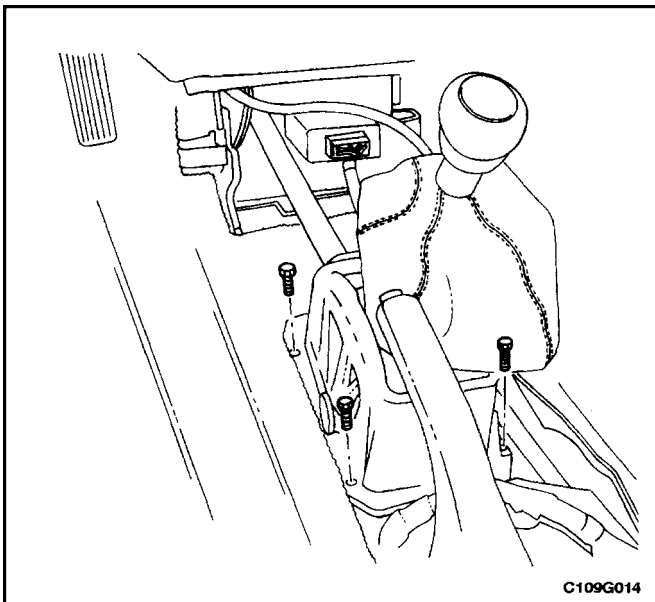

3. Install the gearshift housing with the bolts.

Tighten

Tighten the gearshift housing bolts to 7 N•m (62 lb-in).

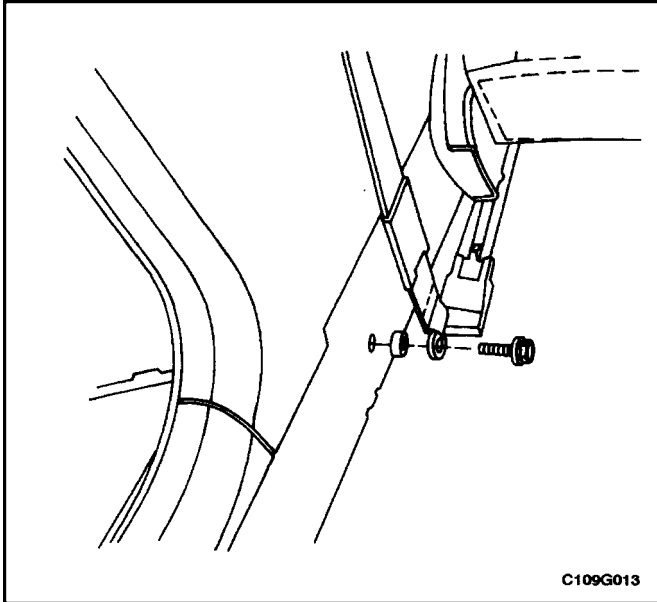

4. Install the floor console. Refer to "Floor Console" in this section.
5. Install the left and the right kick panels. Refer to "Kick Panel" in this section.
6. Install the front seats. Refer to *Section 9H, Seats*.
7. Install the left and the right lower B-pillar trim panels. Refer to "Lower B-Pillar Trim Panel" in this section.
8. Install the left and the right front rocker trim panels.
9. Install the left and the right lower front seat belt anchors to the B-pillar with the bolts.

Tighten

Tighten the seat belt anchor bolts to 37 N•m (27 lb–ft).

10. Install the left and the right rear rocker trim panels. Refer to "Rear Rocker Trim Panel" in this section.
11. Install the rear seat cushion. Refer to *Section 9H, Seats*.
12. Connect the negative battery cable.


LUGGAGE COMPARTMENT WHEELHOUSE TRIM PANEL

Tools Required

KM-475-B Trim Remover


Removal Procedure


1. Remove the plastic retaining clips using the trim remover KM-475-B and reposition the luggage compartment rear trim panel.
2. Remove the plastic retaining clips and the wheelhouse trim panel.

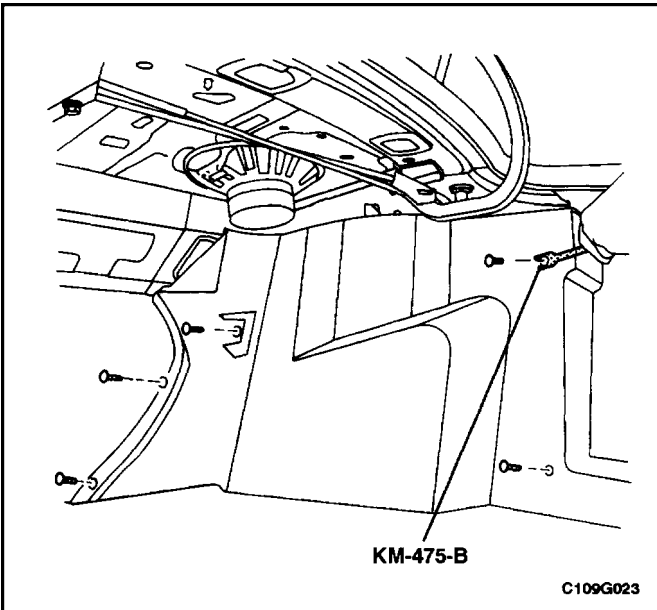

Installation Procedure

1. Install the wheelhouse trim panel with the plastic retaining clips.
2. Install the luggage compartment rear trim panel to its original position.
3. Secure the luggage compartment rear trim panel with the plastic retaining clips.

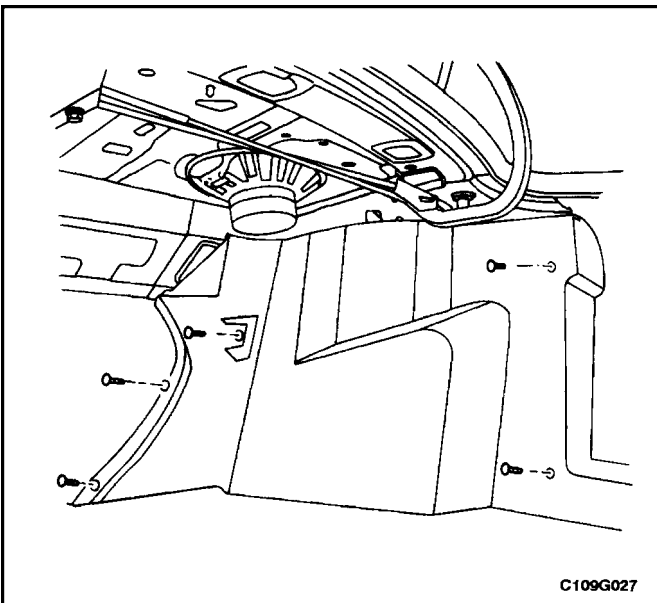

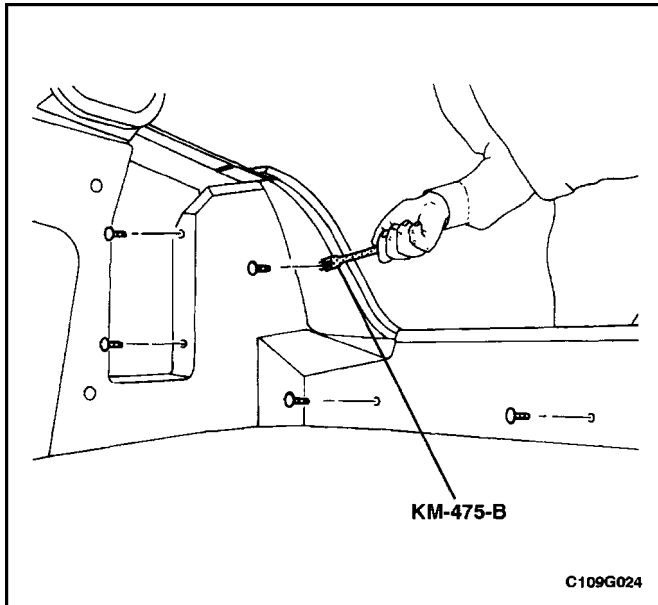


LUGGAGE COMPARTMENT REAR TRIM PANEL

Tools Required

KM-475-B Trim Remover


Removal Procedure

1. Remove the protective trim cover using the trim remover KM-475-B.
2. Remove the plastic retaining clips and the rear trim panel.

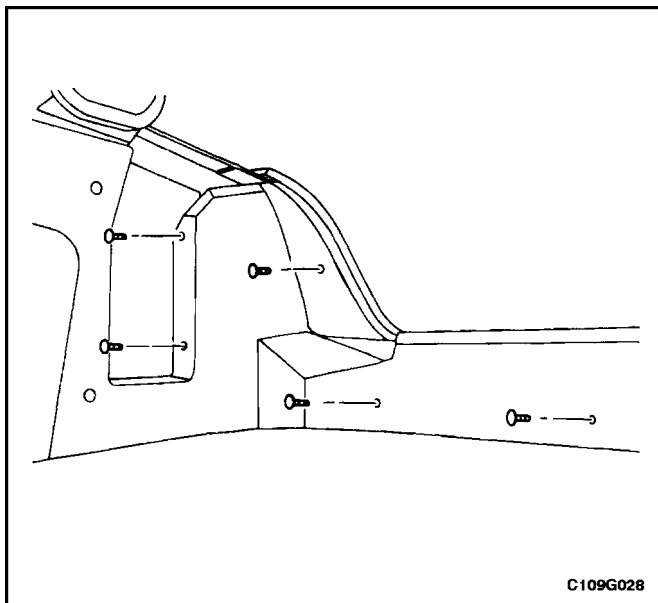

Installation Procedure


1. Install the rear trim panel with the plastic retaining clips.
2. Install the protective trim cover.

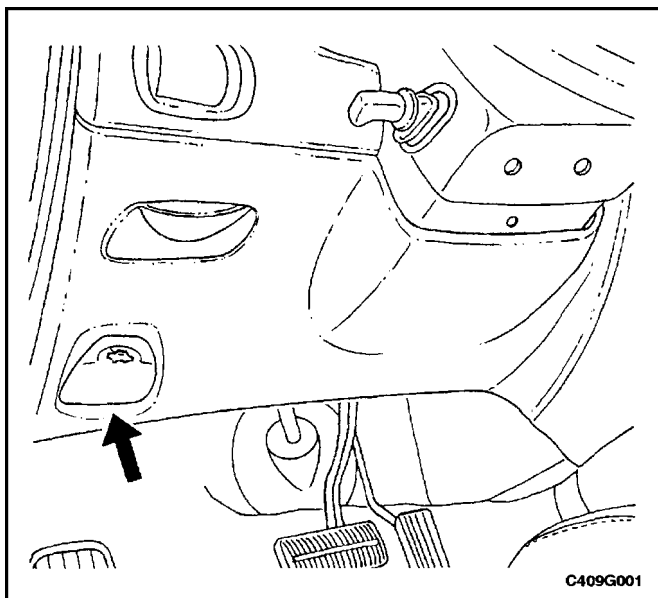


DRIVER'S SIDE KNEE BOLSTER

Removal Procedure

1. Remove the mounting screw from the hood latch release handle.

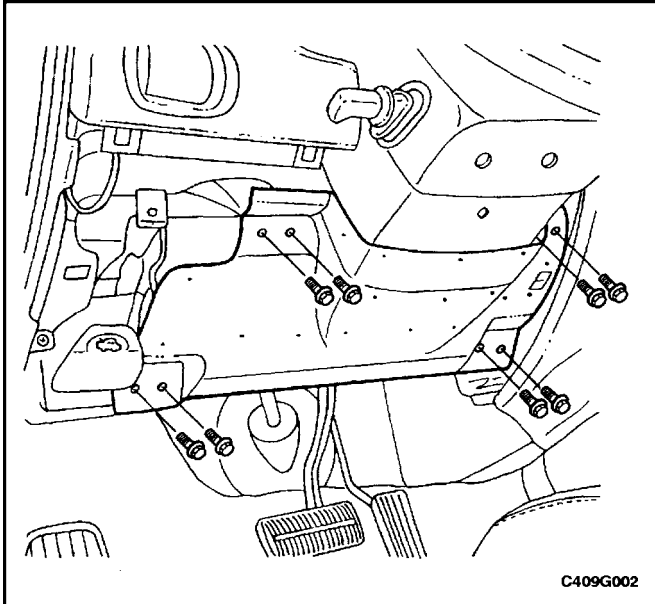

2. Carefully pull the knee bolster trim panel until the mounting clips are released and remove the knee bolster trim panel.
3. Remove the bolts from the driver's side knee bolster and remove the knee bolster.

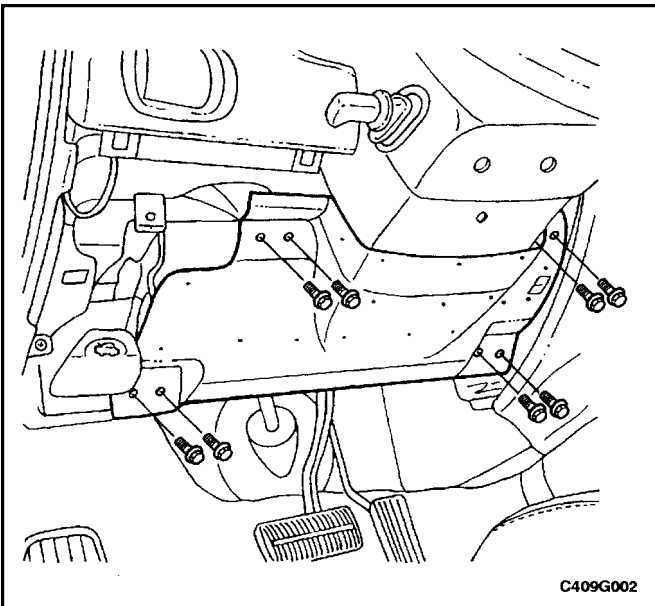


Installation Procedure

1. Install the driver's side knee bolster with the mounting bolts.

Tighten

Tighten the driver's side knee bolster mounting bolts to 10 N•m (89 lb-in).

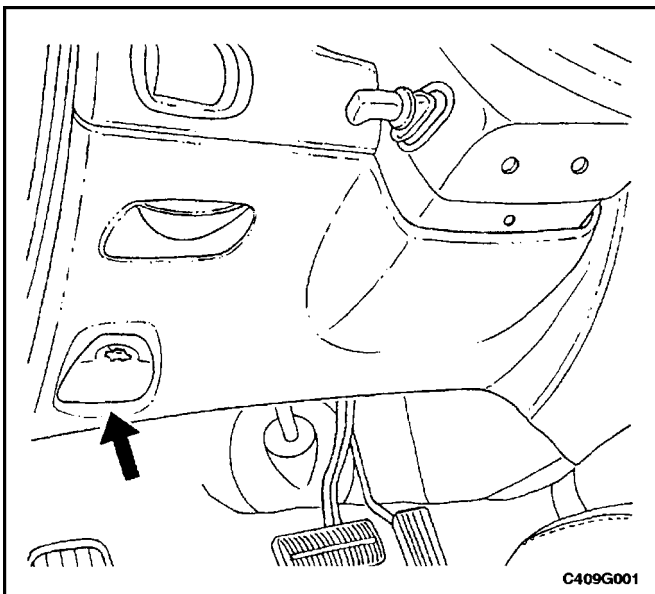

2. Align the clips in the driver's side knee bolster trim panel with the slots in the instrument panel and push the trim panel until the retaining clips lock it in place.
3. Fasten the hood latch release handle with the mounting screw.

Tighten

Tighten the hood latch release handle mounting screw to 3 N•m (27 lb-in).

GENERAL DESCRIPTION AND SYSTEM OPERATION

INTERIOR TRIM PANELS

The interior trim panels are molded plastic and fasten with screws or plastic clips.

PRESSURE RELIEF VENT

When all the windows are closed and the ventilation system is on, the addition of outside air to the interior of the vehicle causes a positive pressure within the vehicle. To relieve the pressure, air is released through a pressure relief vent. The pressure relief vents are located at the rear quarter of the vehicle, behind the bumper fascia.

FLOOR CONSOLE

The floor console fits over the tunnel in the floor of the vehicle and extends from under the center of the instrument panel to the rear seat area. The front portion of the console contains the cigar lighter and the transaxle shift lever. The rear portion of the console contains the parking brake lever, a cupholder, a storage compartment, and an ashtray for the rear seat occupants.

The sensing and diagnostic module (SDM) for the airbag system and the remote keyless entry module are located under the console.

FLOOR CARPET

The one-piece floor carpet goes over both the front and the rear floor pans.